

J5

Red = Joy2 R
Brown = Joy2 L
White = Joy2 D
Grey = Joy2 U
Purple = Ground

J4

Orange = P2-B5
Yellow = P2-B4
Green = P2-B2
Blue = P2-B1
Purple = Ground

J3

Grey = P2-B7
White = P2-B3
Brown = P2-B8
Red = P2-B6
Orange = Ground

J2

Yellow = R-PB
Green = Start 2
Blue = L-PB
Purple = Start 1
Grey = Ground

J9

Purple = Switch
Blue = Switch
Orange = Switch
Yellow = Switch
Green = Switch

J8


Green = Joy1 R
Yellow = Joy1 L
Orange = Joy1 D
Red = Joy1 U
Brown = Ground

J7

Brown = P1-B5
White = P1-B4
Grey = P1-B2
Purple = P1-B1
Blue = Ground

J6

Blue = P1-B7
Green = P1-B3
Yellow = P1-B8
Orange = P1-B6
Red = Ground

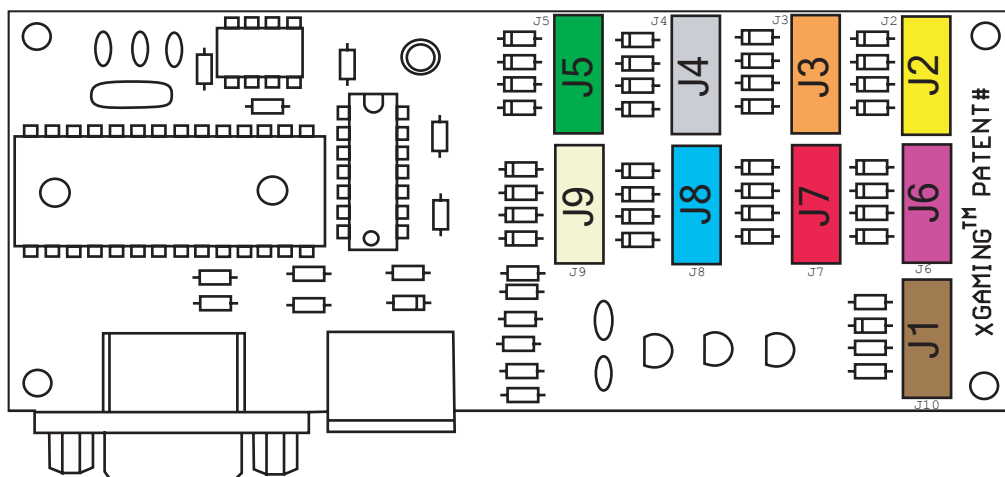

J1

White = Mode B
Grey = Mode B
None
Red = LED
Brown = LED